


YakAttack BlackPak Rod Hinge Installation Guide

This guide walks you through installing the **YakAttack BlackPak Rod Hinge** onto your **ShortStak or BlackPak Pro**. The **13" Rod Hinge installation** follows the same guide, with a few differences noted.

Step 1 – Prepare the Hex Grid Panel

- For the install the **16 screws** onto the **hex grid panel** as shown in the reference photo. **Note:** The longer arms of the 13" hinge attach to the top of the short stack, not the hex grid panel here.
- Be sure to **note the spacing** at the **top and bottom** in the photo below.

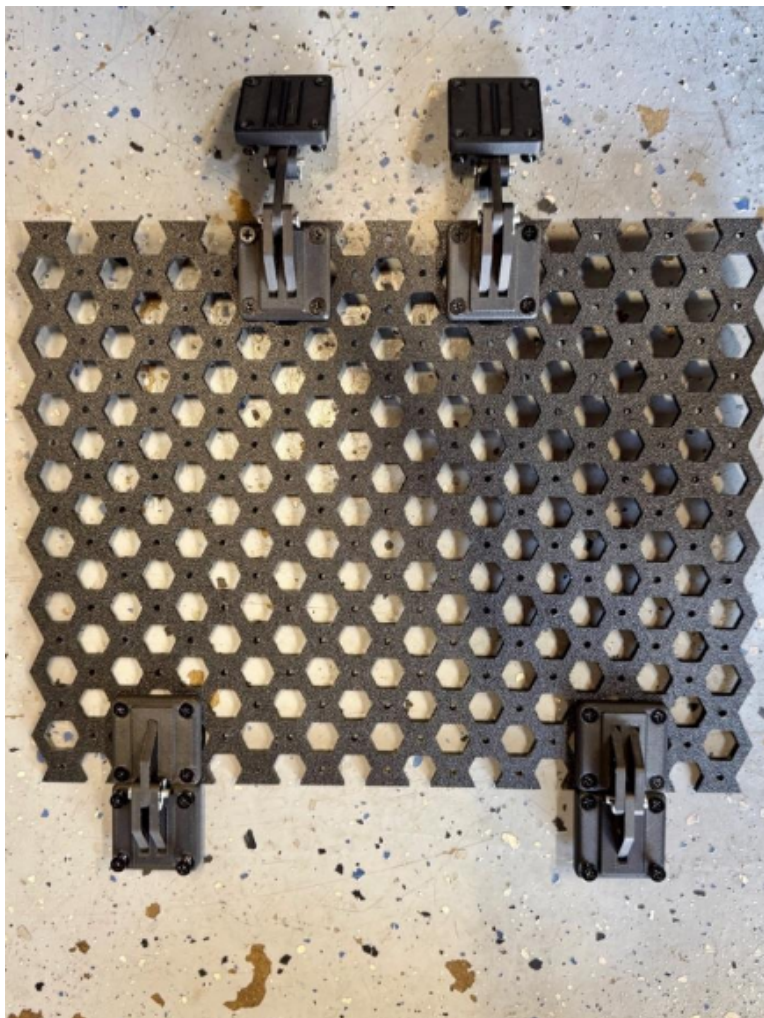

Step 2 – Install the Top Hinges

- Mount the **top hinges** to the **top of your ShortStak or BlackPak Pro**, positioned **between the stock hinges** (see photo reference).
- Secure with 8 provided screws.



Step 3 – Install the Lower Hinges

- Close the **BlackPak and ShortStak** together.
- Using the mounted top hinges as a reference, **mark the holes** where the **lower hinge** will line up.
- Remove **one clevis pin** from the **top hinge on each side**.
- Position the **lower hinges** on the marks you made.
- Secure the lower hinges with the remaining 8 provided screws.



✅ Your YakAttack BlackPak Rod Hinge is now installed and ready for use!

📺 **Install video coming soon!**

❓ If you have any questions about installation, please reach out to us at bigbasschrisdesigns@gmail.com